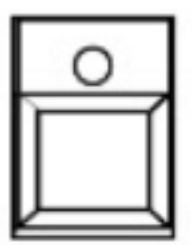
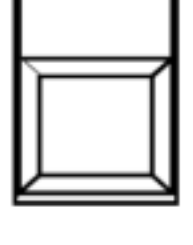
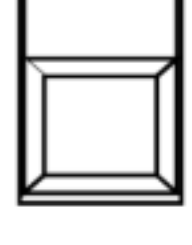



To set the Pitch wheel bend range for a specific program:

hold  +press  

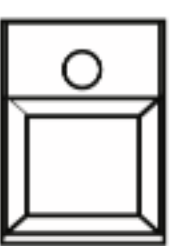
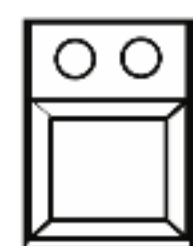
FREQ A
WHEEL-MOD
GROUP SELECT
BANK SELECT

This dot indicates that Layer B is active
A solid dot indicates Stack mode
A blinking dot indicates Split mode



GROUP|BANK|PRGM

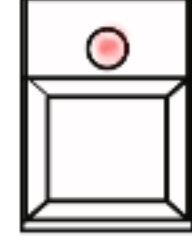
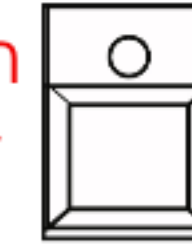
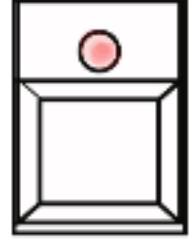
To compare an edited program to a saved version:

press  + press 

RECORD GLOBALS

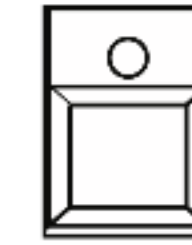
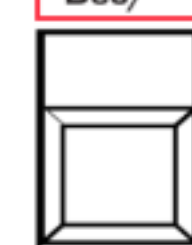
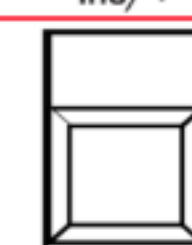
To disable the compare function and return to the edited sound, turn off the GLOBAL button. Programs can't be written while in compare mode.

To use chord memory: To clear chord memory:

hold chord +press  turn off  +play note +press 

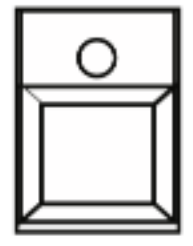
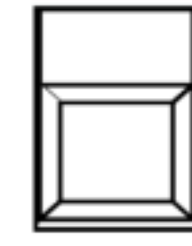
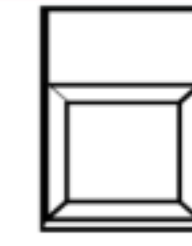
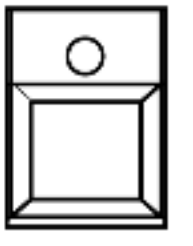
UNISON UNISON UNISON

To turn on Stack mode:

hold  +press  

PRESET GROUP SELECT BANK SELECT

To save an edited program to the same preset location:

press  + optionally press   + press 

RECORD GROUP SELECT BANK SELECT PRGM

Be careful when RECORD is enabled. You can change GROUPS and BANKS without executing WRITE, but once you press a PROGRAM SELECTOR button (1-8) for the "ones" digit, the RECORD command is executed and the program at that location is overwritten.

To cancel the Save process before you commit:

- If the RECORD button LED is flashing, press it again. The LED stops flashing and saving is canceled. You can return to editing if you want.

To detune the oscillators in Unison:

hold  +press 

UNISON PRGM

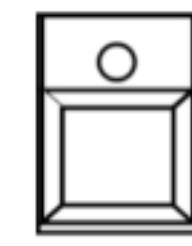


To select a program for Layer B:

press once  +select 

PRESET GROUP|BANK|PRGM

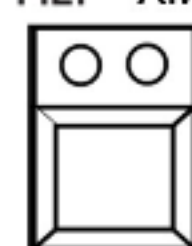
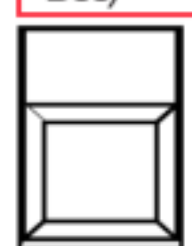
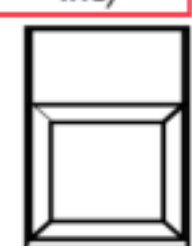
+ Press the PRESET button once again to return to Layer A

To set the Key Priority Mode:

hold  +press  

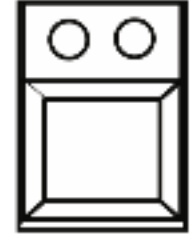
KEYBOARD GROUP SELECT BANK SELECT

Setting the Volume of each layer in a stack:

hold  +press  

VELOCITY GROUP SELECT BANK SELECT

the default program that appears when you turn on the Prophet-10.

press 3x 

GLOBALS

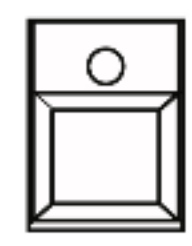
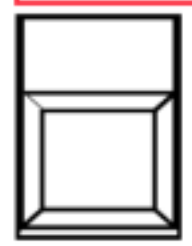
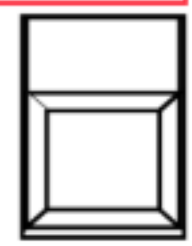
To recall the Basic Preset:

hold  +press 

RECORD PRESET

To enable poly unison mode:

number of voices to stack (instead of "CHd").

hold  +press  

UNISON GROUP SELECT BANK SELECT

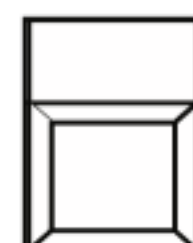
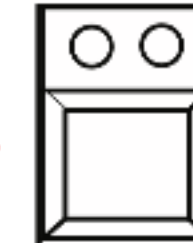
To set the split point:

- Press and hold down a key on the keyboard.

+hold  +press  +press 

PRESET BANK SELECT PRESET

Page 3 of the Globals menu.

hold  + press 

BANK SELECT GLOBALS

PROGRAMMER

○ Transpose	MIDI Channel	Param Xmit.
○ Pot Mode	Release	Sustain
○ 5 Voice Limit	Round Robin	Pedal Mode

1 2 3

To check your OS version:

hold  +press 

GLOBALS TRANSPOSE

1