 


## To set the Pitch wheel bend range for a specific program:

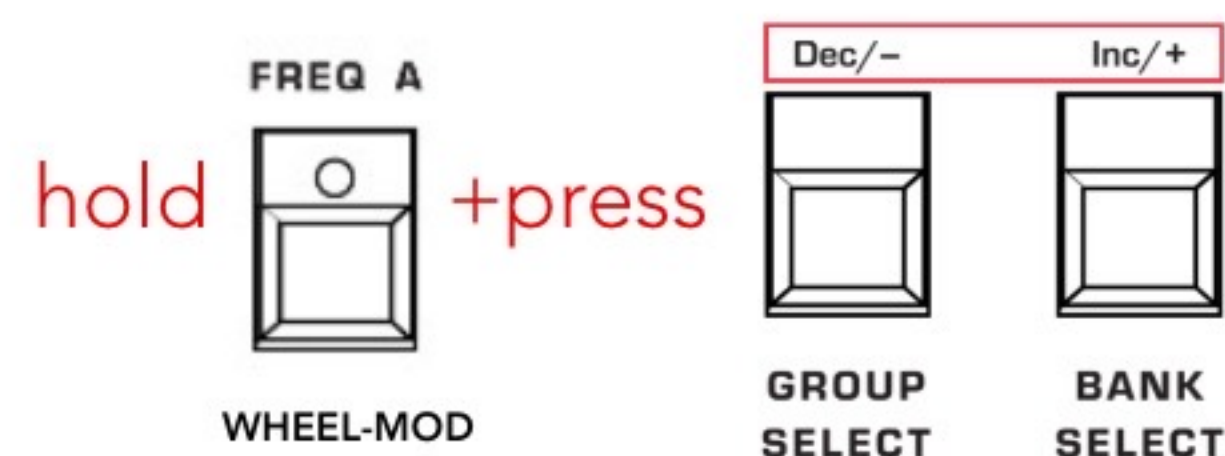

## To use chord memory:



 
## To clear chord memory:



## To detune the oscillators in Unison:




## To set the Key Priority Mode:

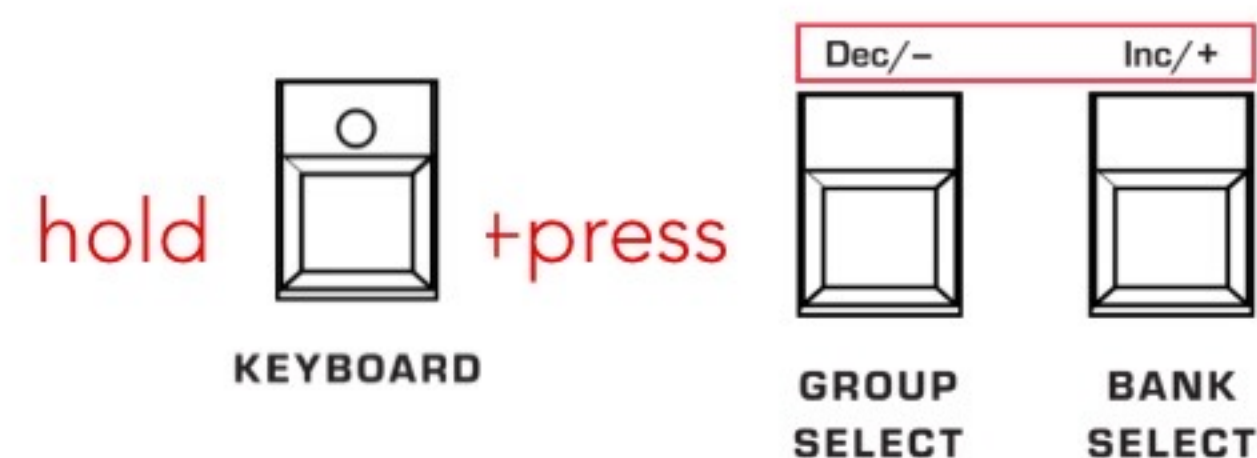


## To enable poly unison mode:

 
number of voices to stack (instead of "CHD").

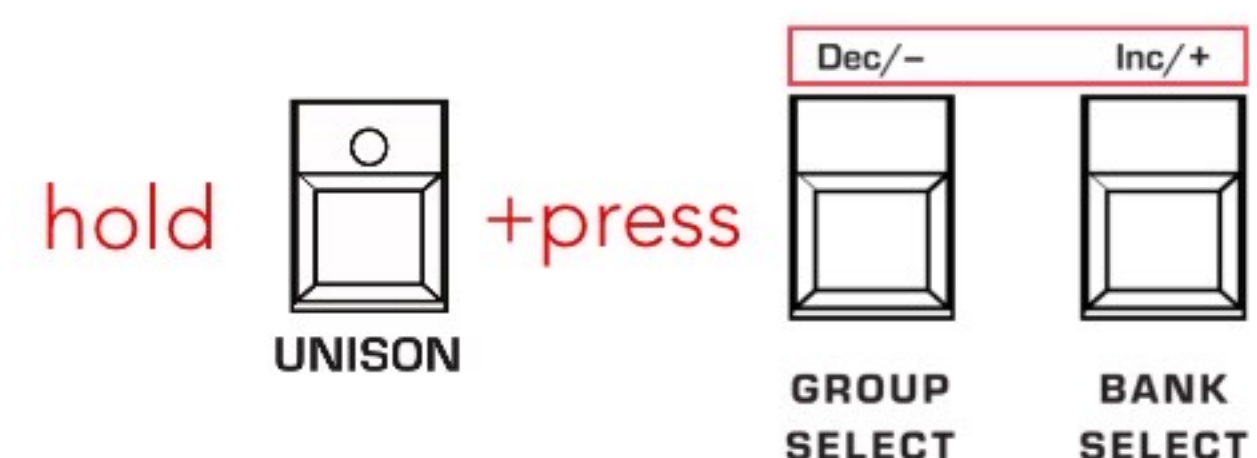

## To adjust the amount of velocity or aftertouch:

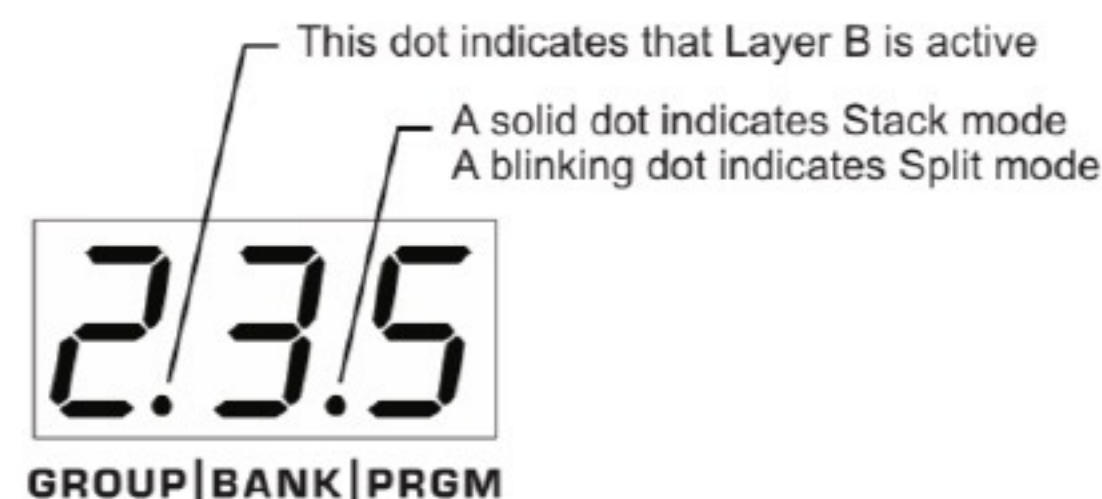 

## To turn on Stack mode:

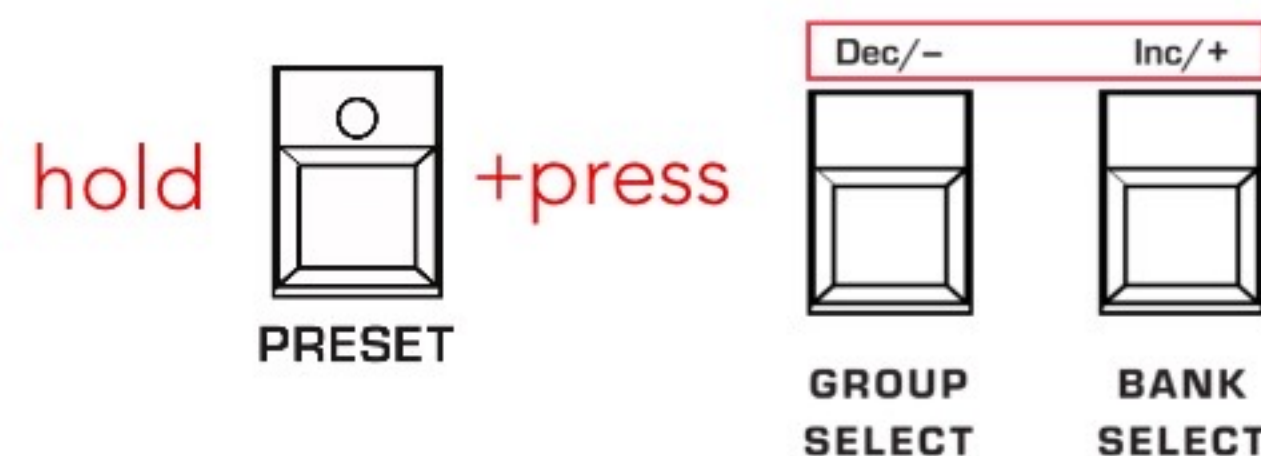 

## To select a program for Layer B:



+ Press the PRESET button once again to return to Layer A

## To set the relative volume balance between both layers in a stack:



## To set the split point:

 
1. Press and hold down a key on the keyboard.




## To link or unlink the layers in a stack or split:




## To set the amount of Q compensation:

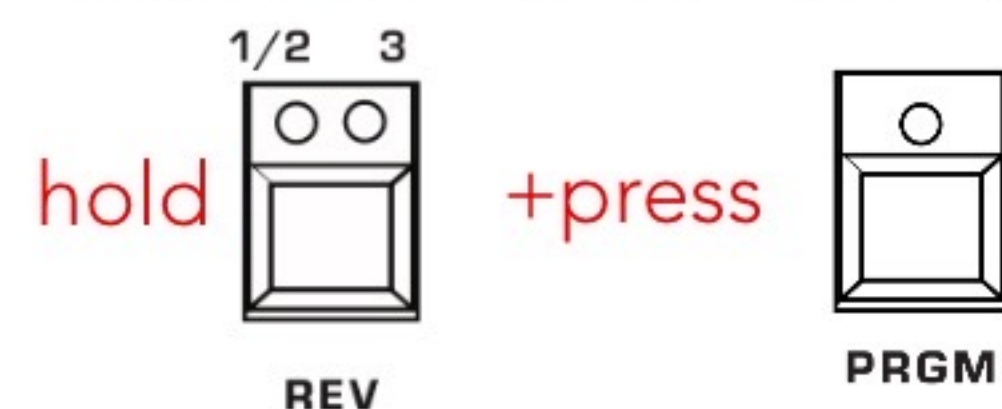

## To compare an edited program to a saved version:

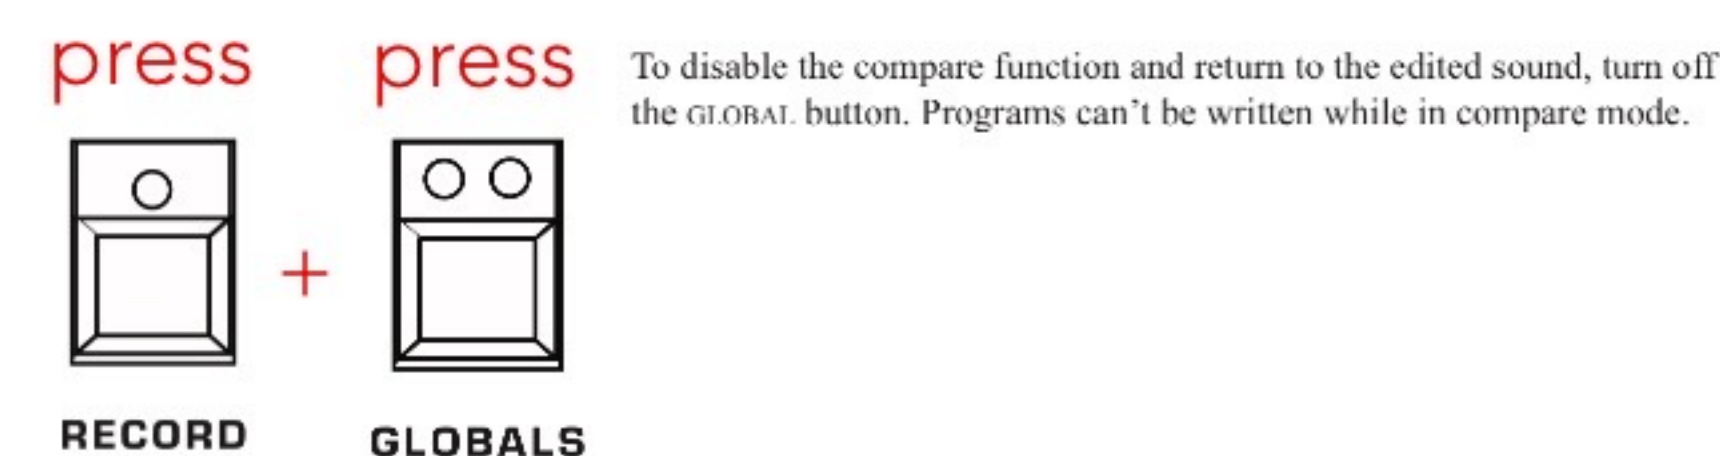 

## To save an edited program to the same preset location:

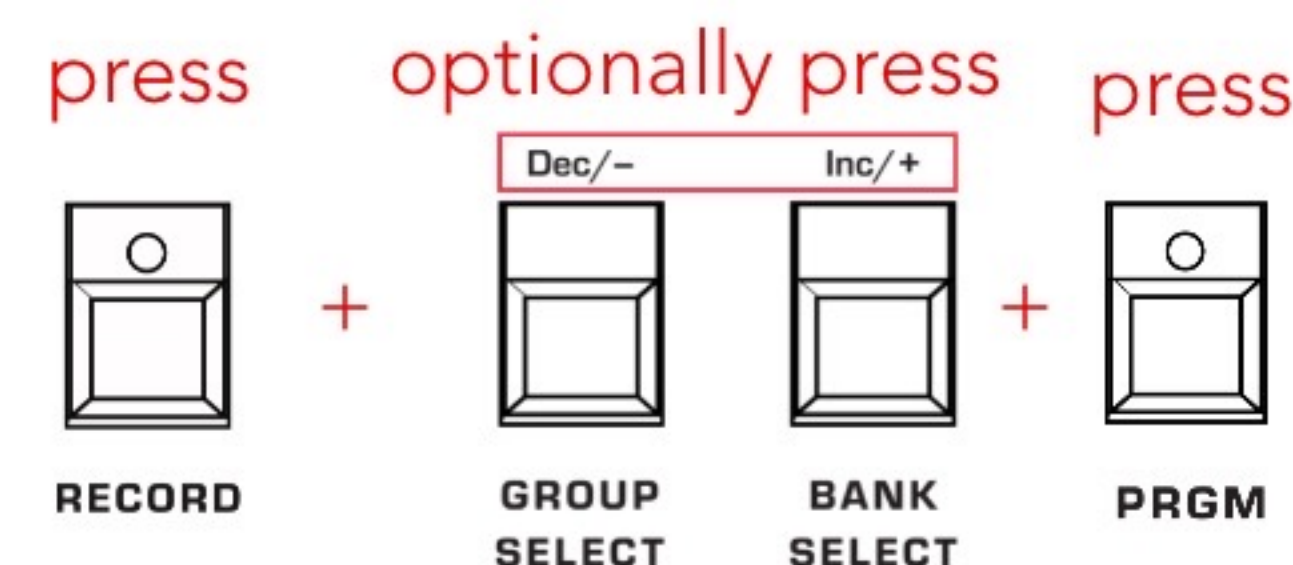 

Be careful when RECORD is enabled. You can change GROUPS and BANKS without executing WRITE, but once you press a PROGRAM SELECTOR button (1-8) for the "ones" digit, the RECORD command is executed and the program at that location is overwritten.

## To cancel the Save process before you commit:

- If the RECORD button LED is flashing, press it again. The LED stops flashing and saving is canceled. You can return to editing if you want.

 
the default program that appears when you turn on the Prophet-10.



## To recall the Basic Preset:



Page 3 of the Globals menu.

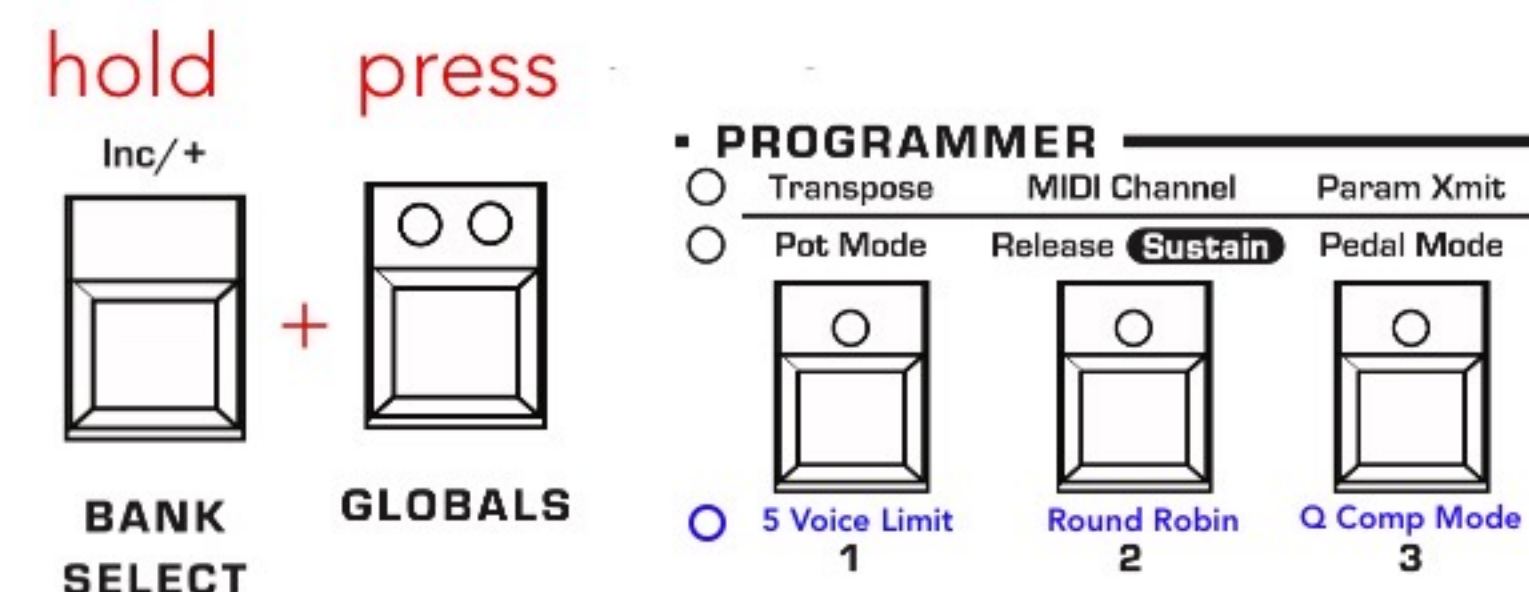

## To check your OS version:

